

Botron B1000 Technical Data Sheet



Features:

The B1000 has three digit LED and soft touch keypad for easy programming as well as digital auto advance and an electric eye cut sensor. Program up to three different tape sizes in manual or auto mode. Available cutting lengths of .20" up to 39". Unit can handle multiple styles of tape and widths ranging from .28" to 2" and 1" thru 3" wide cores

Product Notes and Features

- LED Display
- Steel Blades
- Manual Override
- Photocell Control

PROPERTIES

SPECIFICATIONS

| | |
|------------------|------------------|
| Cutting Length: | 5mm - 999mm |
| Tape Width: | 7mm - 50mm |
| Core Size: | 1" - 3" |
| Accuracy: | +/- .04 (1mm) |
| LED Display: | 3 digits |
| Power Repurement | |
| V: | AC 110V, 220V |
| Hz: | 50/60Hz |
| W: | 18W |
| Dimensions: | 5.4" x 8.5" x 6" |
| Weight: | 5.3lbs |

PART NUMBERS

B1000 Automatic Tape Dispenser
B1010 Replacement Blades



Botron Company Inc. | 325 W. Melinda Ln Phoenix AZ 85027 | Ph# 623-582-6700 | Fax# 623-582-6776

Disclaimer. All statements of technical information are believed to be true and are based upon tests we believe to be reliable. The proper use and application for this product must be the responsibility of the user. The statements herein shall have no force or effect.

BEFORE YOU START

1. When loading the tape, make sure the ON/OFF switch is in the OFF position.
2. While operating the B1000 be careful not to put fingers inside where blade cuts tape. The blade is very sharp and will cause injury if fingers are placed inside.
3. When there are finger marks, oils and/or dirt on the dispenser, the tape will not stick properly. Use a dry cloth to clean.
Note: For more thorough cleaning, wipe the dispenser with alcohol. (Never clean with thinner.)
4. To avoid shortening the life of the motor, run the B1000 without tape as little as possible.
5. This is an industrial tape dispenser. It is not for home use. Do not use around children.
6. The B1000 can be used efficiently by one or two operators. Allow the motor to rest from time to time.

OPERATION

1. Turn power switch to "ON" position.
2. Remove spool.
3. Load preferred tape onto spool and replace.
4. Feed tape carefully into rollers using the FWD button.
5. Close pressure cover.
6. Set desired length on control panel and choose auto or manual for dispensing tape.
7. Press start.